

# Series 27100, 28000

Effective: August 1999

## Vertical DETECT-A-FIRE® Units Installation Instructions

# FENWAL®

12.01.D

### DESCRIPTION

DETECT-A-FIRE™ thermal detectors are UL Listed, UL of Canada available upon request, and FM Approved detection and release devices used with fire detection systems to activate alarms and actuate extinguishing systems. This Rate Compensated device combines the best features of both fixed temperature and rate-of-rise detectors.

### ELECTRICAL RATING

Model Number	Contact Operation on Temperature Rise	Electrical Rating* (Resistive Only)	
27120	Opens (450°F Max)	5.0 Amps	125 VAC
28020		0.5 Amps	125 VDC
27121	Closes	5.0 Amps	125 VAC
28021		0.5 Amps	125 VDC
		2.0 Amps	24 VDC
		1.0 Amps	48 VDC

\*Although incandescent lamps are considered resistive, their inrush current is 10 - 15 times their steady current. Do not exceed ratings.

### LOCATION

DETECT-A-FIRE® Units are precision temperature sensors. They must be mounted in an area (normally a ceiling) so that:

1. The detector spacing complies with both system requirements and requirements of the agency having local jurisdiction.
2. The thermal air path to the shell is not obstructed.

Spacing per UL, FM, and UL of Canada is shown in Table 1. Distances given are for between units on smooth ceilings. Distances from partitions or walls are half that shown. To assure that all spacing requirements are met, consult the authority having local jurisdiction.

### MOUNTING

Detect-A-Fire units are not position sensitive. Horizontal and vertical detectors refer to the most common mounting configuration for that unit. However, each type can be mounted either horizontally or vertically depending on the application and installation requirements.



Table 1.

°F Setting	°F Tolerance	SPACINGS (in feet)			Color Coding
		UL	ULC	FM	
140	+7/-8	50	50	25	Black
160	+7/-8	25	25	25	Black
190	+7/-8	50	50	25	White
210	+7/-8	25	50	25	White
225	+7/-8	25	50	25	White
275	±10	25	50	25	Blue
325	±10	50	50	25	Red
360	±10	25	50	25	Red
450	±15	25	50	25	Green
500	±15	50	50	25	Orange
600	±20	N/A	50	25	Orange
725	±25	N/A	50	25	Orange

**Note:** For clean agents and CO2 suppression systems, ceiling spacing 20 ft. (6.1 meters) apart unless otherwise specified.

Not all units are suitable for all hazard location applications. Refer to Table 2 and markings on the detector for hazardous location suitability.

Table 2.

Hazardous Location	Model Numbr	Fitting Required For UL, ULC Listings and FM Approval
Class I*, Groups A, B, C and D; Class II*, Groups E, F and G	27120-22 27121-20 28020-3 28021-5	Mount detector to a suitably-listed fitting in accordance with National Electric Code and/or local authority having jurisdiction.
Class I*, Groups B, C and D; Class II*, Groups E, F and G	27120-0 27121-0 28021-0	

\*Division 1 and 2.

## INSTALLATION

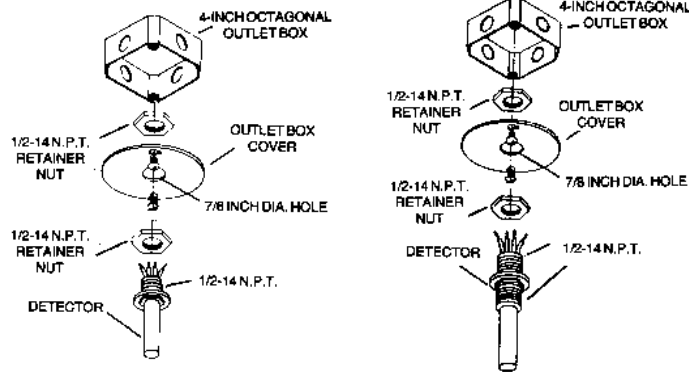


Figure 1

Figure 2

- Kidde-Fenwal recommends that standard 4-inch octagonal outlet boxes be used to mount detectors.
- Attach detector to outlet box cover through a 0.875 inch diameter hole and using two 1/2-14 NPT retainer nuts as indicated.
- Connect system wiring to detector per Figure 3 and applicable electrical codes.
- Ordinary Locations:** The DETECT-A-FIRE Units are to be installed in grounded metallic junction boxes only. They are to be secured to the boxes using two lock nuts, one on either side of the mounting plate. DETECT-A-FIRE Units are not to be installed in non-metallic junction boxes.
- Hazardous Locations:** For Class I, Division 1 and 2 locations, install the DETECT-A-FIRE Unit in a listed explosion-proof enclosure with a minimum thread engagement of five full turns. No non-conductive material is to be placed on the threaded joint of the DETECT-A-FIRE Unit or in the listed explosion-proof enclosure. For Division 2 locations, assure that a protective ground terminal is provided in the listed explosion-proof enclosure when flexible metal conduit is used.
- Do not exceed a maximum torque without thread lubricant of 20 foot-pounds (27.1 Newton Meters).

Series 28000 units are similar to Series 27100 units except they have two 1/2-14 NPT threads for mounting.

The unit may be mounted as described above or may be threaded into a 1/2-14 NPT tapped hole in the vessel wall or threaded into a coupling brazed or welded to the vessel wall.

## FIELD WIRING REQUIREMENT

Field wiring must be capable of withstanding the maximum anticipated ambient temperature in the application.

## FUNCTIONAL TEST

When used with automatic fire extinguishing systems first disconnect the initiator/solenoid leads from the panel and connect a 24 VDC bulb to initiator terminals in the control unit. Heat the D-A-F units with a heat lamp or other convenient source. When the bulb in the control unit changes state, remove heat source and allow D-A-F unit to cool. Reset control unit. Test lamp must change state and stay changed after system is reset. Do not reconnect initiator/solenoid leads until all D-A-F units have cooled below set point as indicated by test lamp. When D-A-F units are used in other types of systems, disconnect them from the system, connect a 24 VDC lamp and power source in series with the D-A-F units and test with heat source as above. Make sure that contacts have reset to normal condition before reconnecting to system circuit.

## **⚠ WARNING**

1. In order to function properly, the sensing shell of the unit must remain free from paint, grease, oil, etc. Should such a build up occur, do not, under any circumstances, attempt to remove it. Replace the unit.
2. Detectors mounted in an area subject to physical abuse or damage, other than above, must be suitably protected without obstructing the thermal air path to the unit.
3. Do not install the unit where the shell would be physically damaged by sand, grain, rocks, etc.
4. Do not overtorque the unit when installing.
5. Any detector that has been abused or damaged must be replaced.
6. Consult the factory for special precautions necessary for outdoor use or moist environments.

**ANY OF THE ABOVE COULD CHANGE THE FACTORY TEMPERATURE SETTING, WHICH MAY RESULT IN PROPERTY DAMAGE AND/ OR PERSONAL INJURY OR DEATH.**

**IT IS POSSIBLE FOR A UNIT TO HAVE BEEN ABUSED OR DAMAGED AND NOT DISPLAY ANY OUTWARD INDICATION OF THE DAMAGE. ALL UNITS SHOULD BE TESTED PERIODICALLY IN ACCORDANCE WITH NATIONAL FIRE PROTECTION ASSOCIATION REQUIREMENTS (72E) OR THE AGENCY HAVING LOCAL JURISDICTION.**

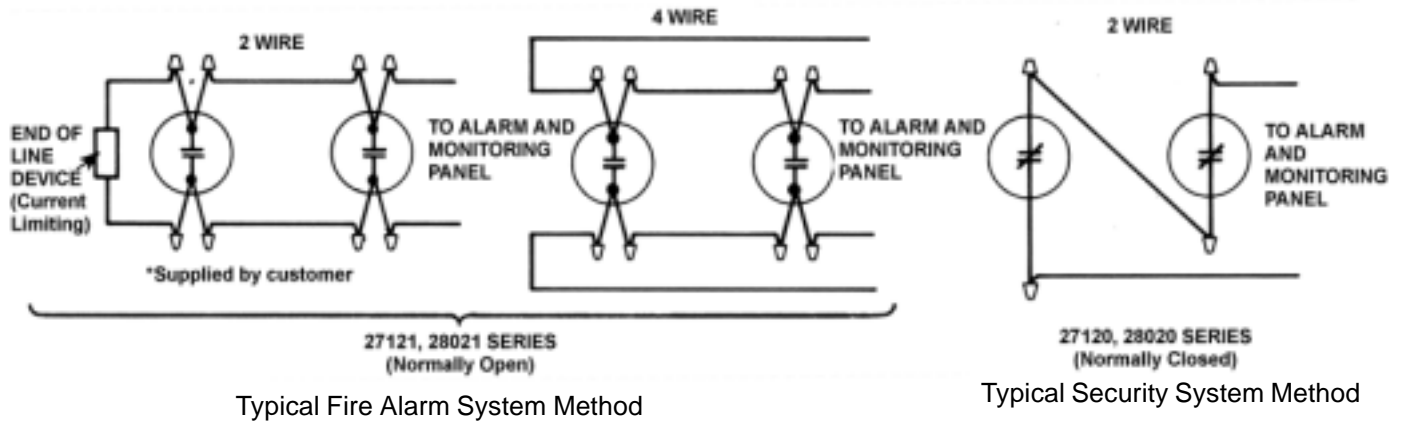


Figure 3. System Wiring

These instructions do not purport to cover all the details or variations in the equipment described, nor do they provide for every possible contingency to be met in connection with installation, operation and maintenance. All specifications subject to change without notice. Should further information be desired or should particular problems arise which are not covered sufficiently for the purchaser's purpose, the matter should be referred to KIDDE-FENWAL, Inc., Ashland, Massachusetts.

---

**FENWAL**<sup>®</sup>

KIDDE-FENWAL, INC.  
400 MAIN STREET, ASHLAND, MA 01721  
TEL: (508) 881-2000 FAX: (508) 881-8920

[www.fenwalfire.com](http://www.fenwalfire.com)



This literature is provided for informational purposes only. KIDDE-FENWAL, INC. assumes no responsibility for the product's suitability for a particular application. The product must be properly applied to work correctly.  
If you need more information on this product, or if you have a particular problem or question, contact KIDDE-FENWAL INC., Ashland, MA 01721. Telephone: (508) 881-2000